



# How to configure the AUSTA Micro-Inverter on a WiFi network and register to use th e AUSTA app

This instruction for AU-1P300/400/600/800/1000/1600/2000 only






## Inverter grid connection settings

1. Make sure the wifi plug is on  
Connect DC source\* (PV input or DC power station)


Make sure the **AC output** is **disconnected**

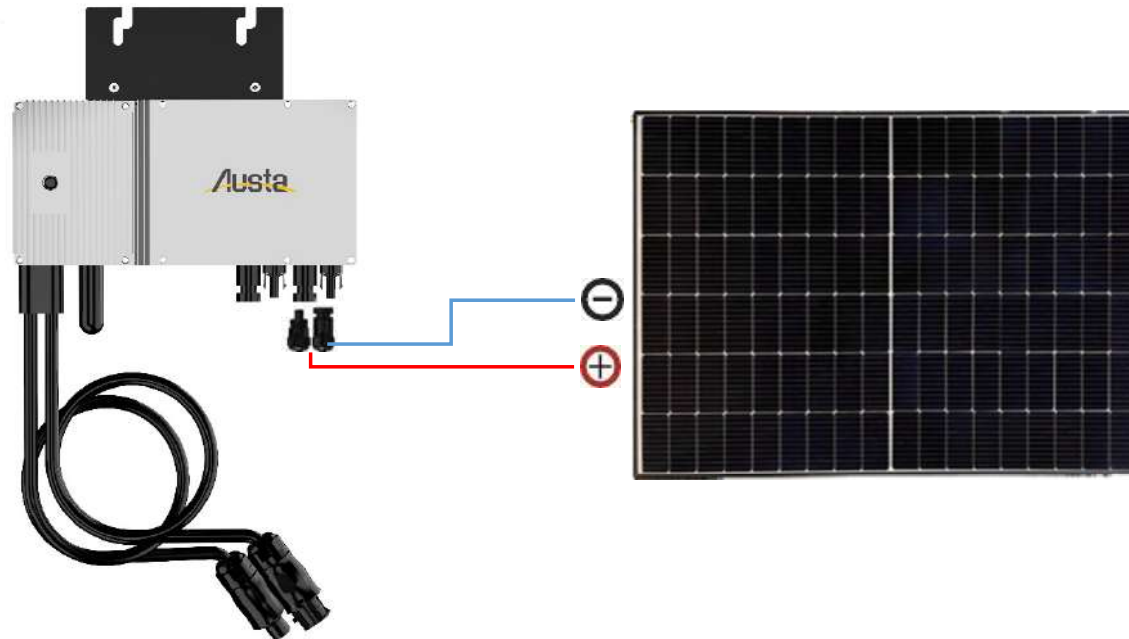

\*DC source can be a PV panel at day time, LED light flashes every 1 second




## 2. Click on wifi configuration

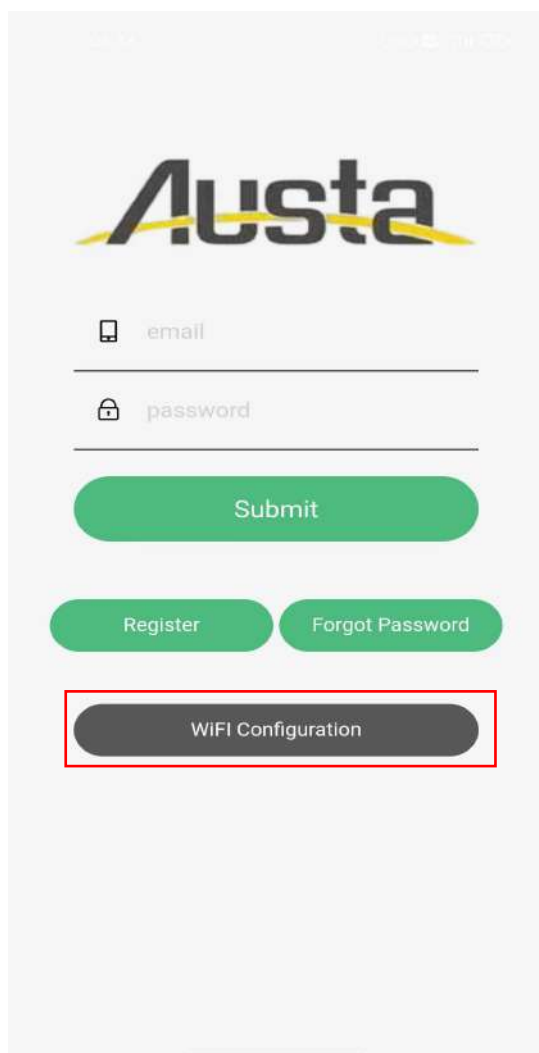




### 3. Click on setup WiFi connection , and select your home WiFi name and enter your password

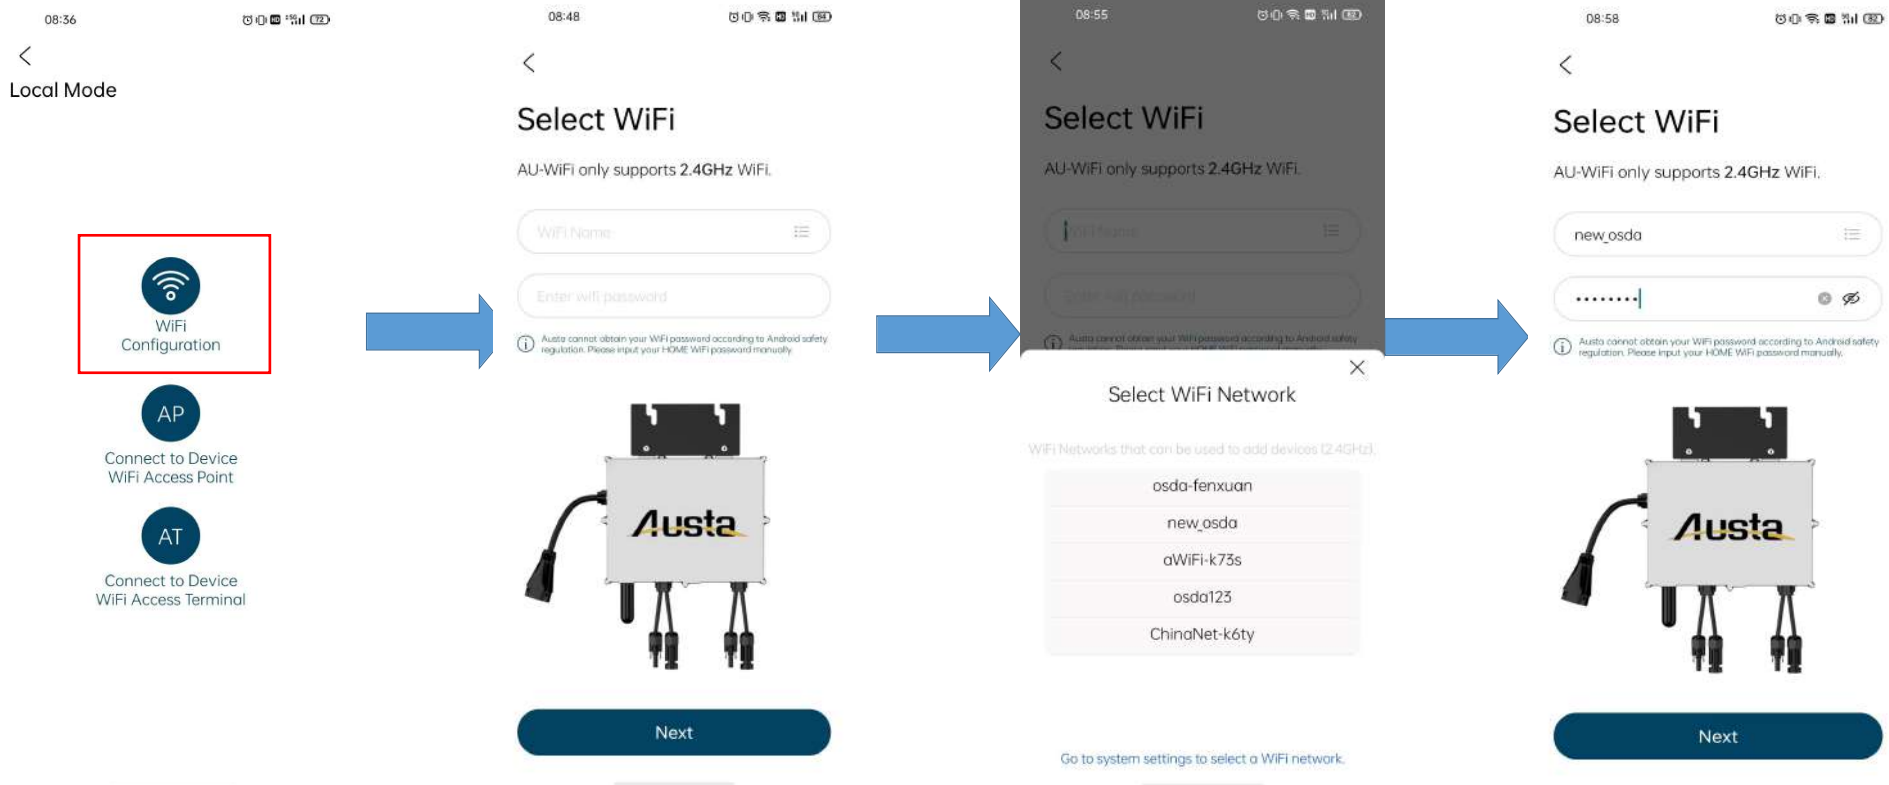

This is where you enter **your home WiFi and WiFi password**. Note that only **2.4Ghz** is currently supported, not 5Ghz.



4. Click 'Next' and wait 90s, Click Next and wait 90s and continue with the operation to connect MI-XXXXXXXXXX.

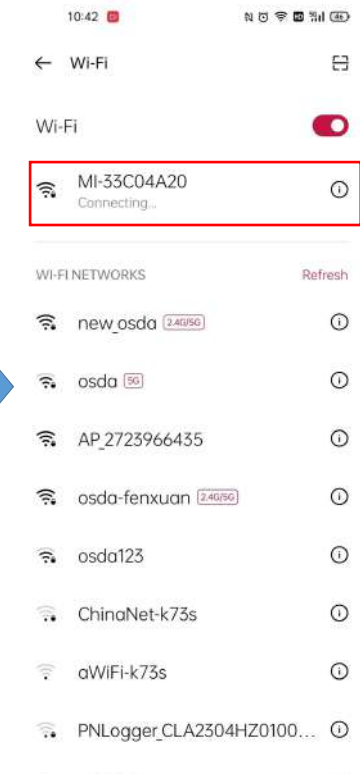




5. Return to this screen and click the blue button again. Go to the connection test screen, click on the middle WiFi button, select a setting.



DO NOT plug in AC cable

- Step 1: Connect PV panel
- Step 2: Wait for 90 seconds
- Step 3: Connect your phone to AP WiFi  
SSID MI-XXXXXXX  
Password: 12345678
- Step 4: Return to Austa


Inverter gets power from PV panel. Configuration can only be done at daytime. Please go to Setting>WiFi to connect to MI-AP

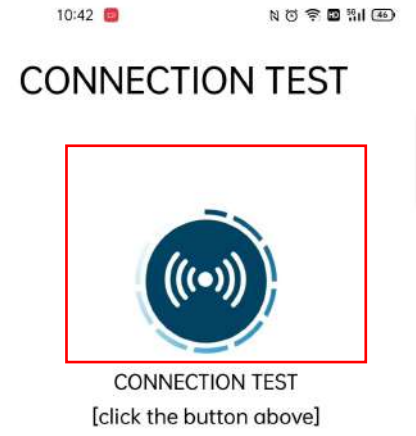

WARNING:  
Some home router does not support this function. In this case, plug in AC power outlet and check if the Inverter LED light blinks green after 20 minutes




Restart WiFi Configuration

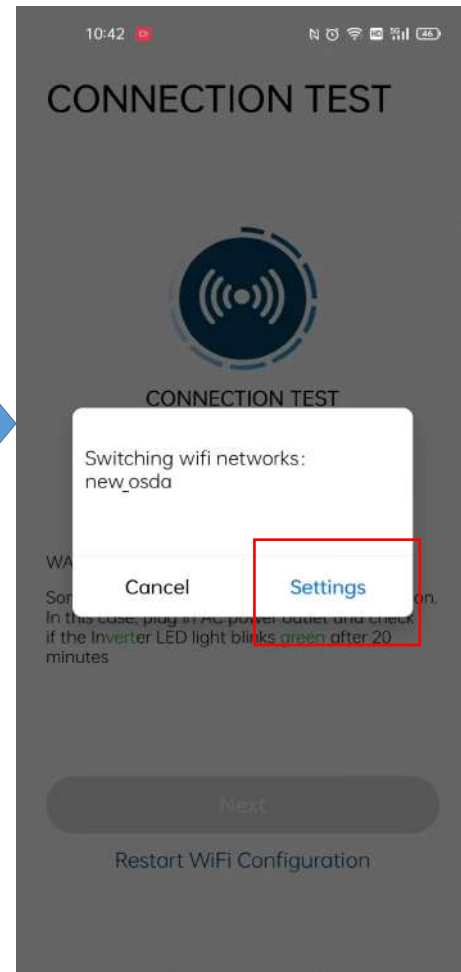

Restart WiFi Configuration




5. Select your home WIFI again, click next when it shows success, and finish setting up.

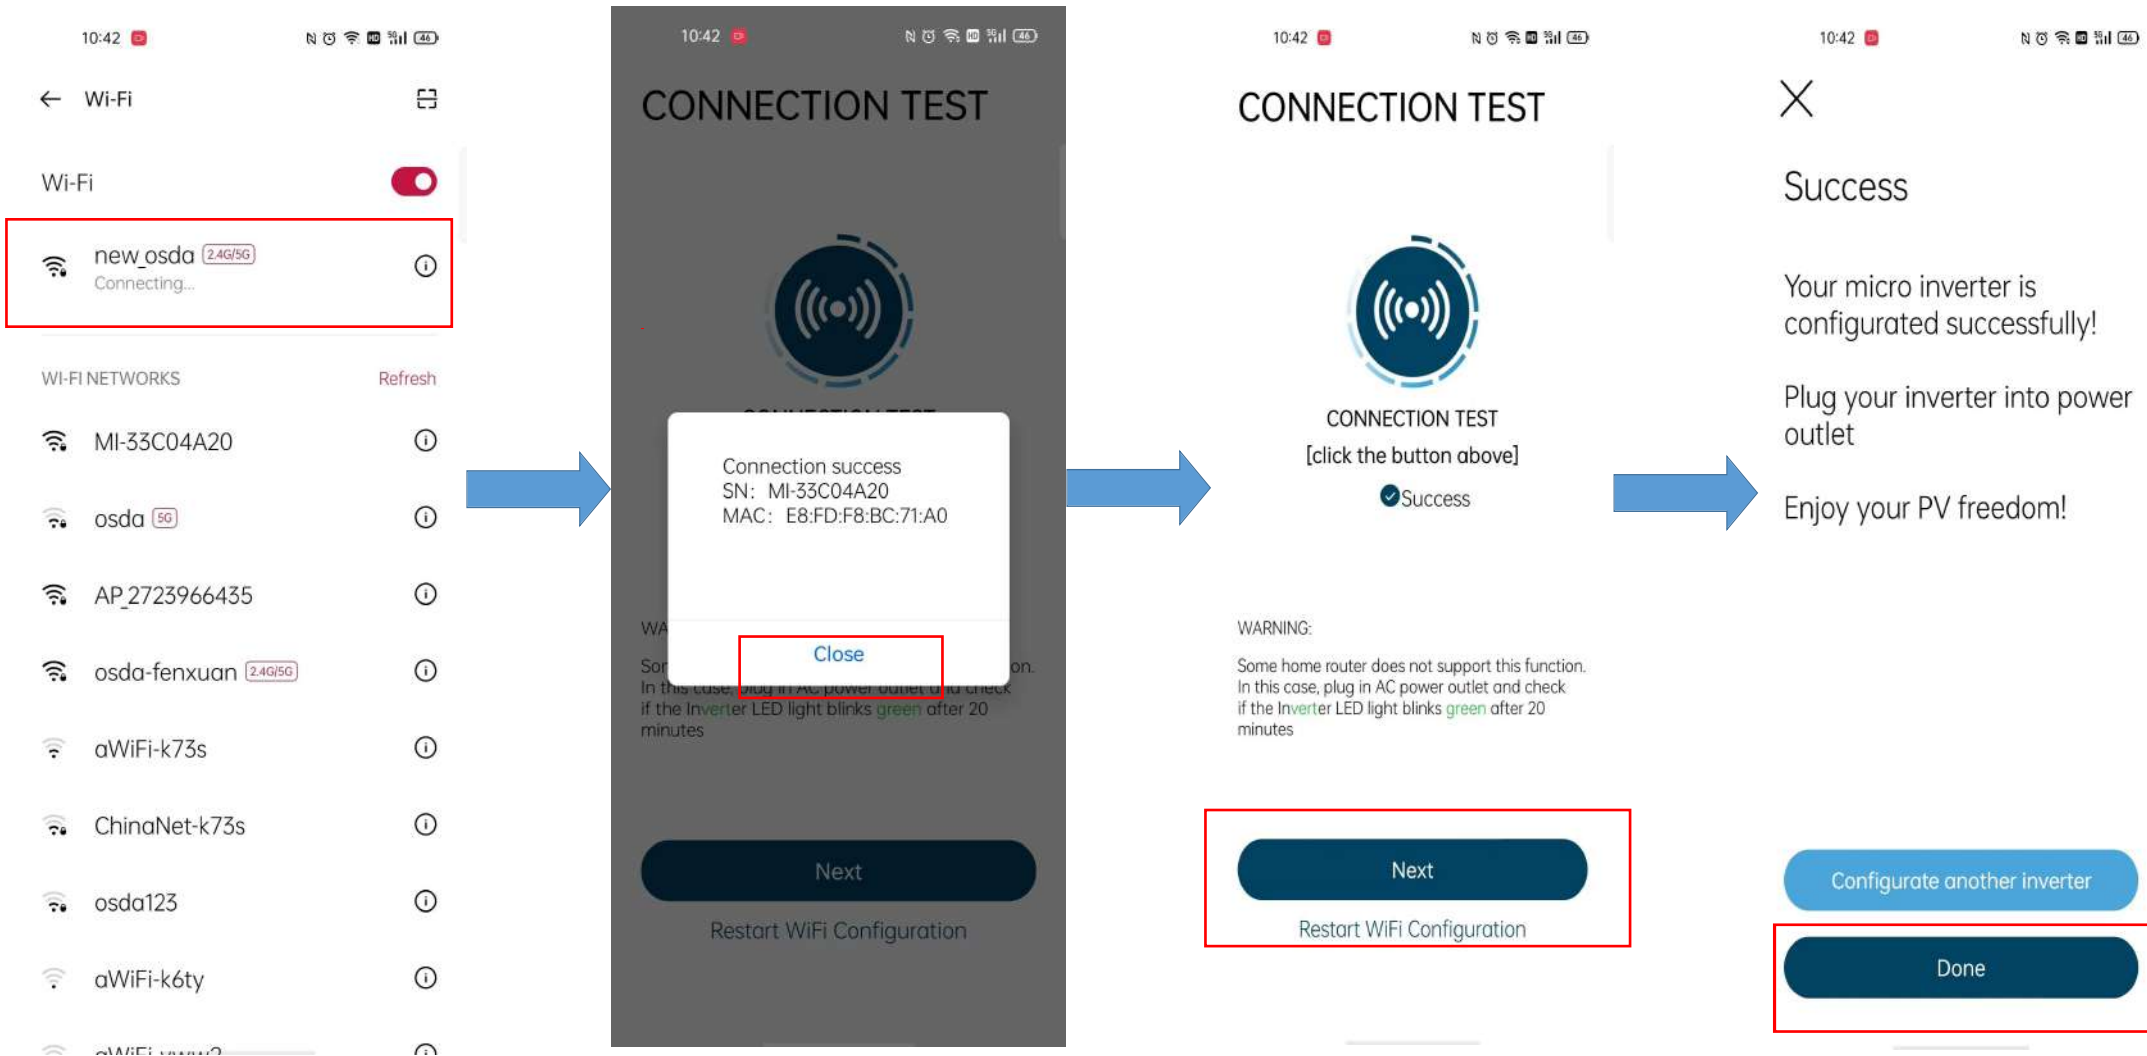



6. Connect **AC(Grid)**, after LED flashes **GREEN** every 3 secs, then configuration is done.

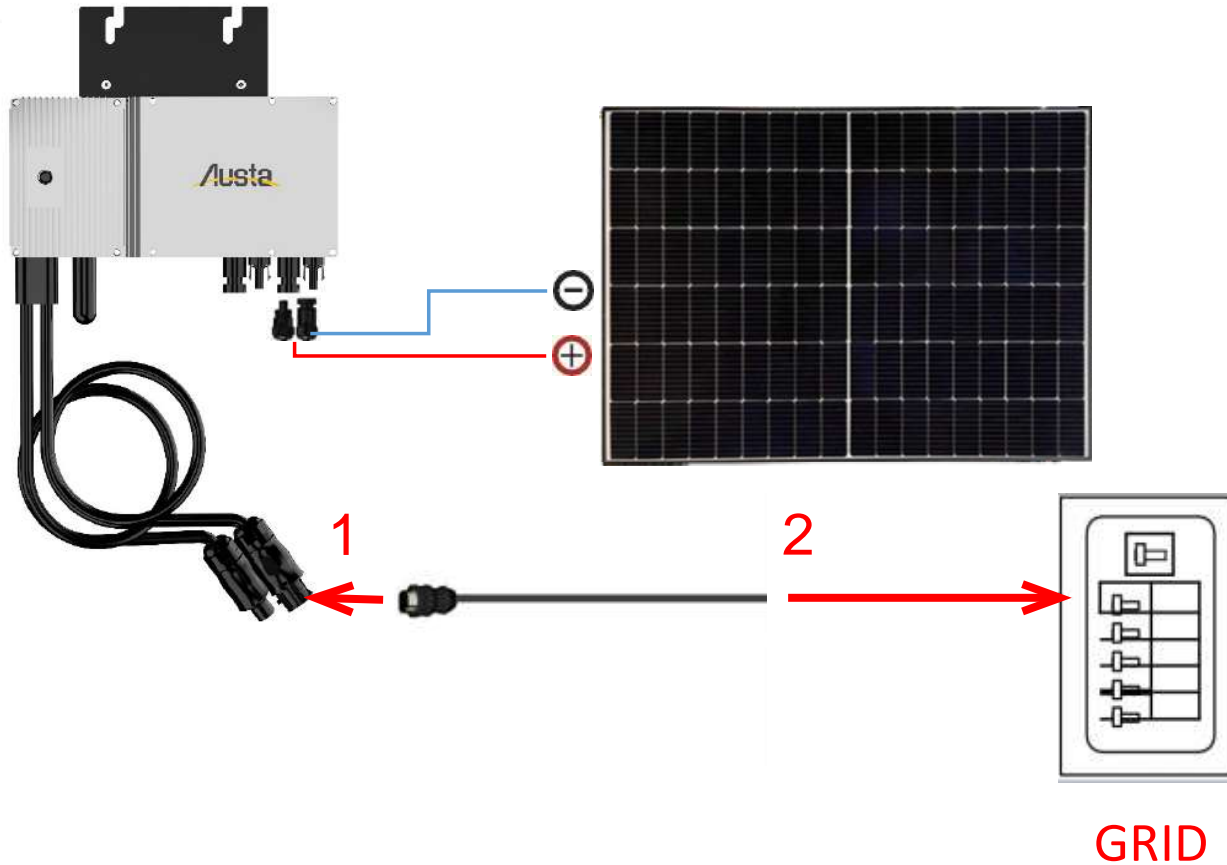





## APP REGISTRATION



The registration screen features the Austa logo at the top. Below it are two input fields: 'email' with a smartphone icon and 'password' with a lock icon. A dark blue 'Submit' button is positioned below the fields. At the bottom, there are three buttons: 'Register' (highlighted with a red border), 'Forgot Password', and 'WIFI Configuration'.





The registration form is titled 'Register' and includes the following fields: '\*Email', '\*Password', and '\*Confirm Password' (all required fields). Below these are optional fields: 'Street (optional)', 'City (optional)', 'Country (optional)' (with a 'select' dropdown), 'State / Province (optional)' (with a 'select' dropdown), and 'Zip Code (optional)'.

1. Use **AUSTA** APP, and register your ID with your available information  
Note that '\*' is a required field



## 2.ADD INVERTER

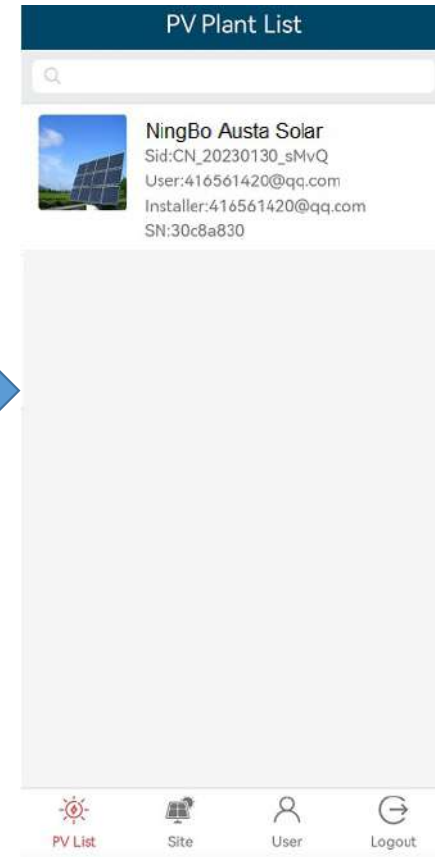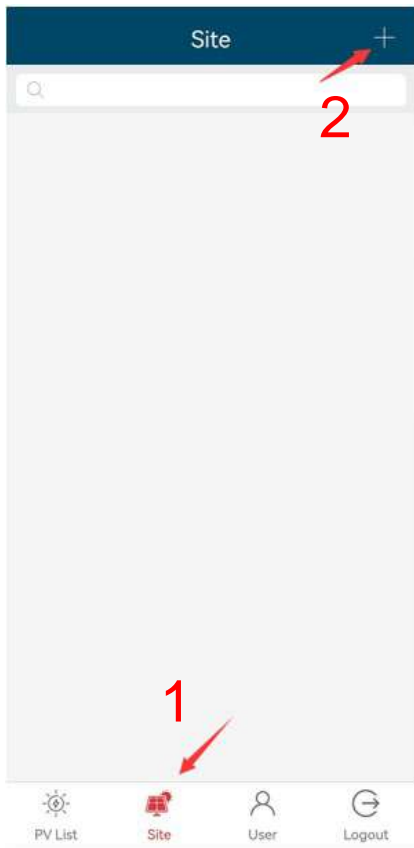



Select **Site** and press **+** to add inverter

Input correct information accordingly  
Note that '\*' is a required field

Inverter adding successful



## UI EXAMPLE

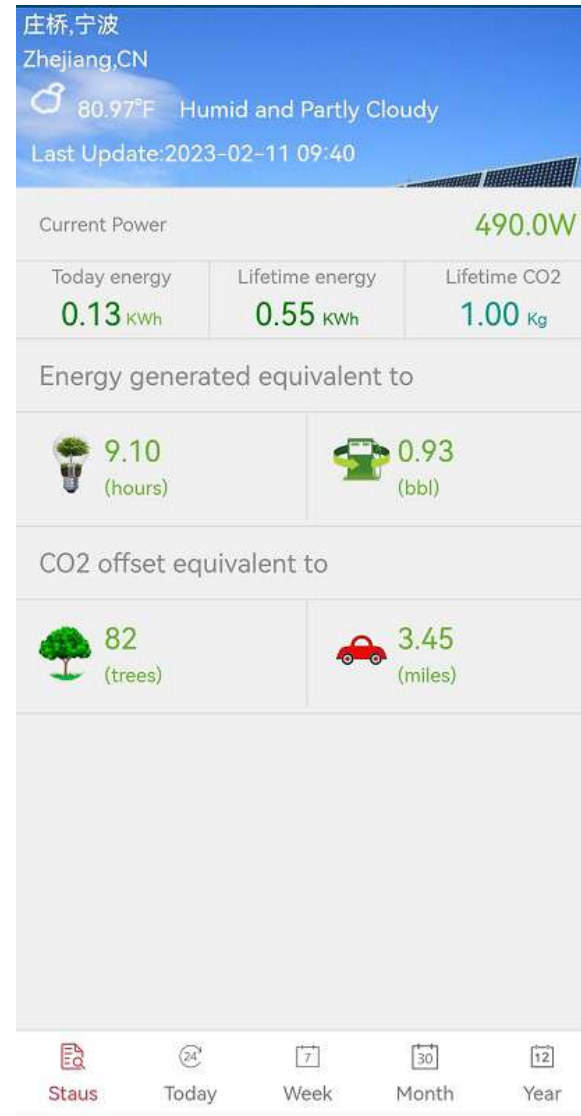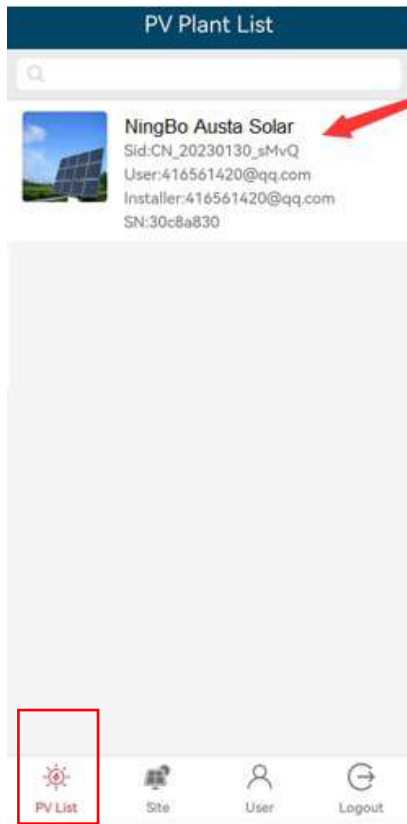

Press the inverter list, you can check **Status** for each inverters